



Notice to user

IMPORTANT INFORMATION



READ FIRST before changing the battery

With 5-year battery life (*), KISTOCK guarantees long-term measurements.

To change the battery:

- Remove the screw located at the back, with a screw driver
- Remove the front part, along with the old battery
- Insert the new battery observing the proper polarity
- Replace the front
- Tighten the screw
- **IMPORTANT: Press the « Select » key to refresh the battery level**

(*) on the basis of 1 measurement each 15 minutes at 20°C



Notice to user

IMPORTANT INFORMATION



READ FIRST before changing the battery

With 5-year battery life (*), KISTOCK guarantees long-term measurements.

To change the battery:

- Remove the screw located at the back, with a screw driver
- Remove the front part, along with the old battery
- Insert the new battery observing the proper polarity
- Replace the front
- Tighten the screw
- **IMPORTANT: Press the « Select » key to refresh the battery level**

(*) on the basis of 1 measurement each 15 minutes at 20°C



Notice to user

IMPORTANT INFORMATION



READ FIRST before changing the battery

With 5-year battery life (*), KISTOCK guarantees long-term measurements.

To change the battery:

- Remove the screw located at the back, with a screw driver
- Remove the front part, along with the old battery
- Insert the new battery observing the proper polarity
- Replace the front
- Tighten the screw
- **IMPORTANT: Press the « Select » key to refresh the battery level**

(*) on the basis of 1 measurement each 15 minutes at 20°C