

## **User Manual**

Pressure • Temperature • Humidity • Air Velocity • Airflow • Sound level

# Vane probe thermo-anemometer LV 120 - LV130











LV 120

#### "Select" key-

See table

"Functions available from main screen"

#### "Function" key \_

1x: "Hold": measure holding

2x: "Min/Max": display of minimum and maximum values from channel 1 since last request.

3x: "Min/Max": display of minimum and maximum values from channel 2 since last request.

4x : Back to held measure.



ON : Switch-on

 $\pmb{\mathsf{OFF}}: \mathsf{Switch\text{-}off}$ 

Escape: Return to previous screen

#### "Backlight" key -

1x - ♥- Level 1

2x - ፟√ Level 2

3x - V - No backlight

Average calculation	1x	Solect → OK Start → OK Average value → OK Min/Max values		
Select cone	2x	Select → OK → Press Select to scroll down cone list	⇒Validate with OK	
Ø of circular area	3x	Select — OK — Press (Select " Circ." and press OK Enter diameter with (See2)	⇒ Validate with OK	
Dimensions of rectangular area	3x	Select → OK → Press (Select "Rect." and press (OK)  Enter length with (Select)  Enter width with (Select)	⇒ Validate with OK ⇒ Validate with OK	
Select air velocity units	4x	Select → OK → Press sur Select to scroll down units.	⇒ Validate with Ок	
Select temp. units	5x	Select → OK → Press Select to scroll down units.	⇒ Validate with Ок	
Automatic shut-off	6x	Soloci → OK → Press Soloci to scroll down minutes.	⇒Validate with OK	
Веер	7x	Select → OK → Press (Select) to activate or to deactivate	⇒Validate with OK	

Number of key pressing

#### Functions available from AIR FLOW main screen

Back to velocity menu	1x (Select) → (OK) → In order to change dimensions or type of side wall vent		
Select air flow units	2x (Select) → OK) → Press (Select) to scroll down units.	⇒ Validate with OK	
Select temp. units	3x (Select) → OK) → Press (Select) to scroll down units.	⇒ Validate with OK	
Automatic shut-off	4x Select → OK → Press Select to scroll down minutes.	⇒Validate with OK	
Веер	5x (Select) → OK) → Press (Select) to activate or to desactivate.	⇒Validate with OK	

### How to change battery

- 1. Remove the front part at the back of the instrument
- 2. Remove old battery
- Insert the new battery in accordance with proper polarity drew inside the housing.
- 4. Replace the front.



Once returned to KIMO, required waste collection will be assured in the respect of the environment in accordance to 2002/96/CE guidelines relating to WEEE.

#### www.kimo.fr

#### EXPORT DEPARTMENT

Boulevard de Beaubourg - Emerainville - BP 48 77312 MARNE LA VALLEE CEDEX 2 Tel : + 33.1.60.06.69.25 - Fax : + 33.1.60.06.69.29



9 V