



# Thermo-anemometer VT 100



**"Select" key**

See table  
"Functions available from main screen"

**"Function" key**

- 1x : "Hold" : measure holding
- 2x : "Min/Max" : display of minimum and maximum values from **channel 1** since last request.
- 3x : "Min/Max" : display of minimum and maximum values from **channel 2** since last request.
- 4x : **Back** to held measure.

**"On / off" key**

**ON** : Switch-on  
**OFF** : Switch-off  
**Escape** : Return to previous screen

**"Backlight" key**

- 1x Level 1
- 2x Level 2
- 3x No backlight

## Functions available from VELOCITY main screen

 
<b>Average calculation</b>	1x	Select → OK	Start → OK	Average value → OK	Min/Max values
<b>Select cone</b>	2x	Select → OK	→ Press Select	to scroll down cone list	⇒ Validate with OK
<b>Ø of circular area</b>	3x	Select → OK	→ Press Select	to select "Circ." and press OK	⇒ Validate with OK
			↳ Enter diameter with Select		
<b>Dimensions of rectangular area</b>	3x	Select → OK	→ Press Select	to select "Rect." and press OK	⇒ Validate with OK
			↳ Enter length with Select		⇒ Validate with OK
			↳ Enter width with Select		⇒ Validate with OK
<b>Select air velocity units</b>	4x	Select → OK	→ Press sur Select	to scroll down units.	⇒ Validate with OK
<b>Select temp. units</b>	5x	Select → OK	→ Press Select	to scroll down units.	⇒ Validate with OK
<b>Automatic shut-off</b>	6x	Select → OK	→ Press Select	to scroll down minutes.	⇒ Validate with OK
<b>Beep</b>	7x	Select → OK	→ Press Select	to activate or to deactivate	⇒ Validate with OK
<b>Air pressure</b>	8x	Select → OK	→ Press Select	enter air pressure	⇒ Validate with OK

## Functions available from AIR FLOW main screen

<b>Back to velocity menu</b>	1x	Select → OK	→ In order to change dimensions or type of side wall vent
<b>Select air flow units</b>	2x	Select → OK	→ Press Select to scroll down units. ⇒ Validate with OK
<b>Select temp. units</b>	3x	Select → OK	→ Press Select to scroll down units. ⇒ Validate with OK
<b>Automatic shut-off</b>	4x	Select → OK	→ Press Select to scroll down minutes. ⇒ Validate with OK
<b>Beep</b>	5x	Select → OK	→ Press Select to activate or to deactivate. ⇒ Validate with OK

## How to change battery

1. Remove the front part at the back of the instrument
2. Remove old battery
3. Insert the new battery in accordance with proper polarity drew inside the housing.
4. Replace the front.



Once returned to KIMO, required waste collection will be assured in the respect of the environment in accordance to 2002/96/CE guidelines relating to WEEE.

[www.kimo.fr](http://www.kimo.fr)

EXPORT DEPARTMENT  
Boulevard de Beaubourg - Emerainville - BP 48  
77312 MARNE LA VALLEE CEDEX 2  
Tel : + 33.1.60.06.69.25 - Fax : + 33.1.60.06.69.29

