


**Omnidirectional probe**  
**SFCO**




**Before measuring :**

- Unfold the probe to expand it of 5 cm at least.
- Turn right the up of the probe.  
*The ball goes into the expected location.*
- Slide down the up of the probe until the ball is blocked up.

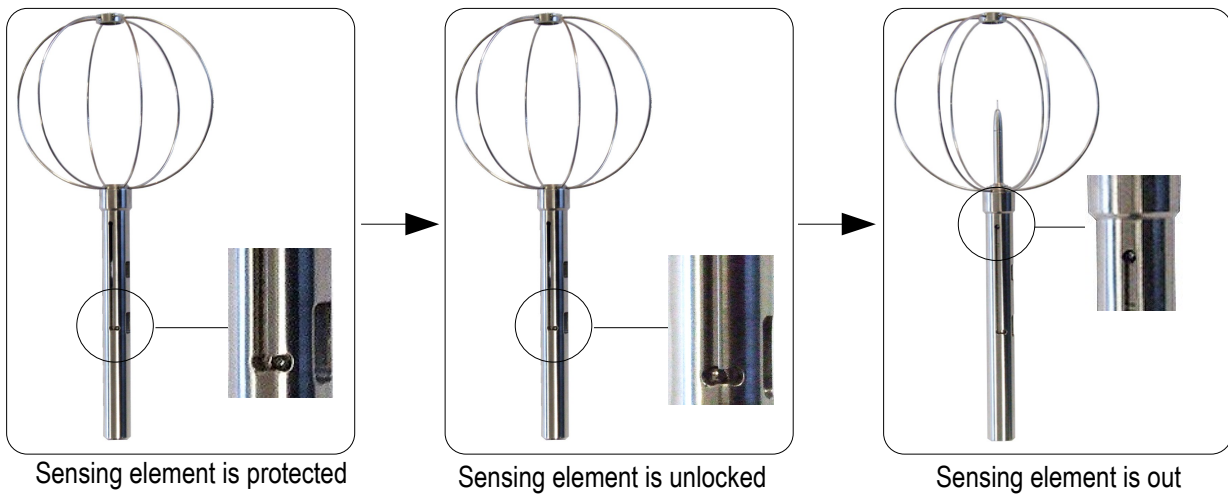

**Once measurement is completed**

- Turn left the up of the probe to lock the sensing element.
- Slide up the up of the probe until the ball is at the bottom.
- Retract completely the probe.  
*The ball goes into the expected location, the sensing element is inside the handle and is protected.*

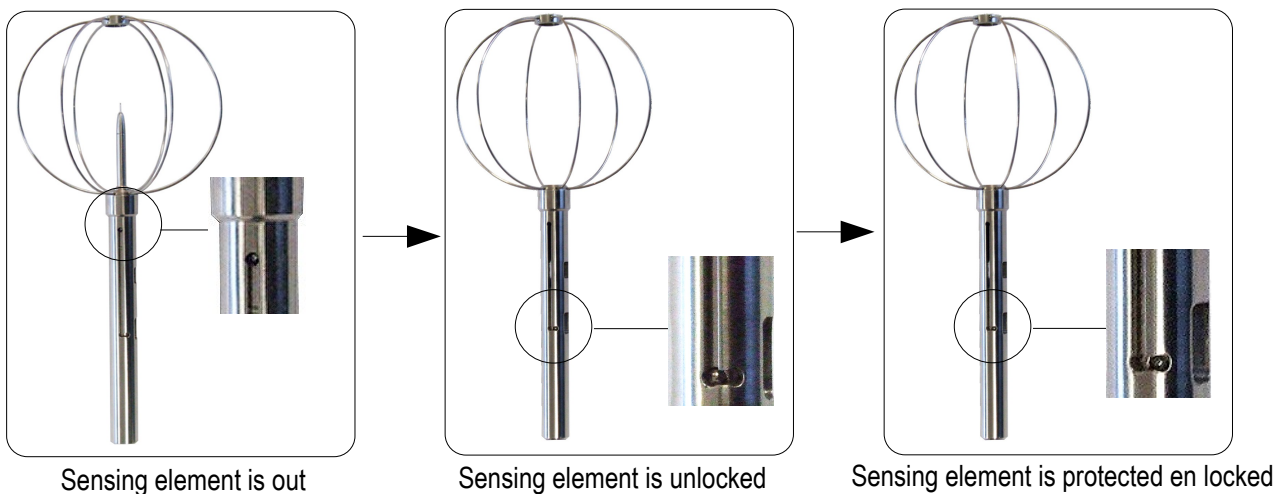

**www.kimo.fr**

**EXPORT DEPARTMENT**  
Boulevard de Beaubourg - Emerainville - BP 48  
77312 MARNE LA VALLEE CEDEX 2  
Tel : + 33.1.60.06.69.25 - Fax : + 33.1.60.06.69.29

