

Gas leak detector FG 100



"Select" key

See table
"Functions available from main screen"

"Function" key

1x : **"Hold"** : measurement holding
2x : **"Min/Max"** : display of minimum and maximum values since last request.
3x : **Back to held measurement.**

"On / Off"

ON : Switch on
OFF : Switch off
Escape : Return to previous screen

"Backlight" key

1x Backlight activation
2x Backlight deactivation

"OK" key

1x **"OK"** : **"Validation"** or **"Scroll settings"**

Functions available from main screen

Unit	1x	 →  → Press  to scroll down units. ⇒ Validate with 
Automatic shut-off	2x	 →  → Press  to activate or deactivate. ⇒ Validate with 
Beep	3x	 →  → Press  to activate or deactivate. ⇒ Validate with 
Alarm	4x	 →  → Press  to activate or deactivate. If the alarm is activated, press  to define the threshold. Press  to increment threshold value and  to go to the next number. Once threshold is defined, stay on the last number at right and press  then  to go back to measurement screen.

■ **Make a measurement**


Turn on the detector.

When it starts, the instrument **beeps** and begins the **warming up** of the sensor. This phase lasts **60 seconds**. The screen displays remaining time of sensor warming up.

- During normal operating, when there is no gas leakage, the instrument emits a regular beep every 2 seconds.
- Otherwise, if a gas leakage has been detected by the instrument, the repetition frequency of the beep will increase as the detected gas concentration increases and the screen flashes also at the same frequency. When the alarm threshold is exceeded, the beep becomes continuous.

■ **How to change battery**

1. Remove the front part at the back of the instrument
2. Remove old battery
3. Insert the new battery in accordance with proper polarity shown inside the housing.
4. Replace the front.

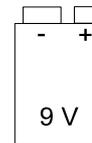

Once returned to KIMO, required waste collection will be assured in the respect of the environment in accordance to 2002/96/CE guidelines relating to WEEE.

www.kimo.fr

EXPORT DEPARTMENT
 Boulevard de Beaubourg - Emerainville - BP 48
 77312 MARNE LA VALLEE CEDEX 2
 Tel : + 33.1.60.06.69.25 - Fax : + 33.1.60.06.69.29

